0672 67 MH4892 0672 68 MH4893

### Description

MyHOME\_Screen 10 with 16:9 10" LCD screen and new graphic interface:


- management of all My Home and Video door entry system functions
- navigation by rooms
- management of multimedia contents through USB connection, SD Card, LAN network, or IP
- management of customised profiles
- possibility of customising background images


Installation: the device is suitable for wall mounted installation using the bracket supplied.

Available in white and in black. No additional surround plate needed.


### **Technical data**

Power supply from SCS BUS: 18 – 27 Vdc
Local power supply (1 – 2): 22–27 Vdc
Local max. absorption (1 – 2): 370 mA
Max. absorption from SCS BUS: 50 mA
Operating temperature: 5 – 45 °C

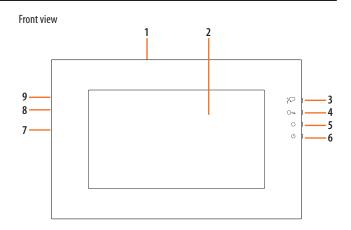

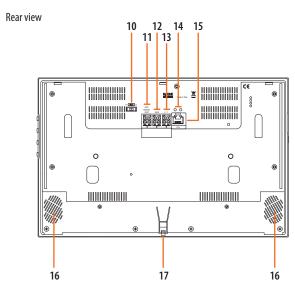

### **Dimensional data**

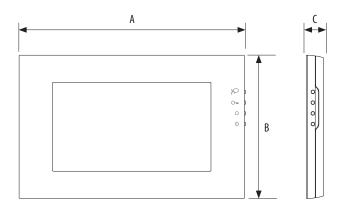

A	В	(
315 mm	200 mm	24 mm

# Legend

- 1. Microphone
- 2. 10" touch screen colour LCD display
- 3. Call answer pushbutton
- 4. Door lock release
- 5. Switching on/Camera scrolling
- 6. Monitor off
- 7. USB connector
- 8. Mini-USB connector for the connection to the PC
- 9. Secur Digital memory card connector
- 10. Line termination ON/OFF micro-switch
- 11. Sound system output connector
- 12. 2 WIRE video BUS/SCS connector
- 13. 1 2 power supply connector
- 14. LAN connection signalling LED
- 15. RJ45 connector for Ethernet connection
- 16. Loudspeakers
- 17. Safety spring





## Configuration


 $\label{thm:myhome} \textbf{My} \\ \text{HOME\_Screen10} \\ \text{must be configured using the software.}$ 

In order to receive/transfer the configuration performed, or to update the firmware, connect the device to the PC using one of the following solutions:

- USB-miniUSB cable;
- Ethernet cable.

# USB connection

### **Ethernet connection**

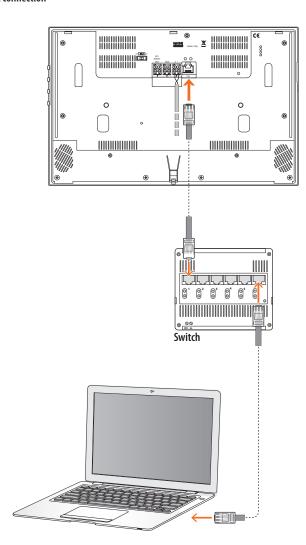

For the configuration download the software from the website www.homesystems-legrandgroup.com  $\,$ 





# Wiring diagram

