

INSTRUCTIONS FOR FITTING FEET

These feet must only be used with suitable panel heaters.


Feet should be fitted maximum 100 millimetres approx 4 inches from either end of the heater. Both feet must be used, one at each end of the heater.

Align lugs on feet with spaces in grill at bottom of heater then slide feet forward see (fig 1).

Align **non-removable clip** with the two rear slots and press down until it clicks into place. (fig 2). **Note** once the clip is in position the feet **cannot** be removed.

If you are not using the feet, the heater must be fitted to the wall with the bracket supplied as per installation instructions.

FIG 1

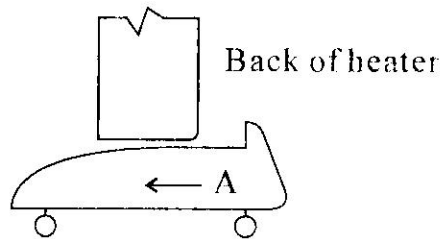

Position lugs in bottom grill then
Slide foot forward in the position
Of the arrow A until the back of
The heater is hard against the
Upstand of the foot B



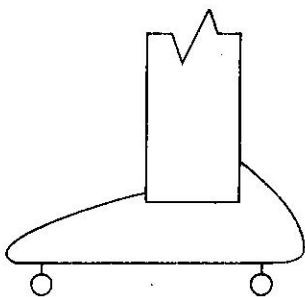


FIG 2

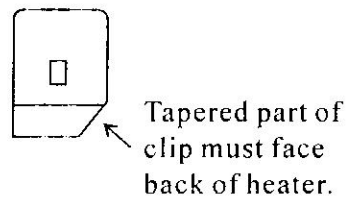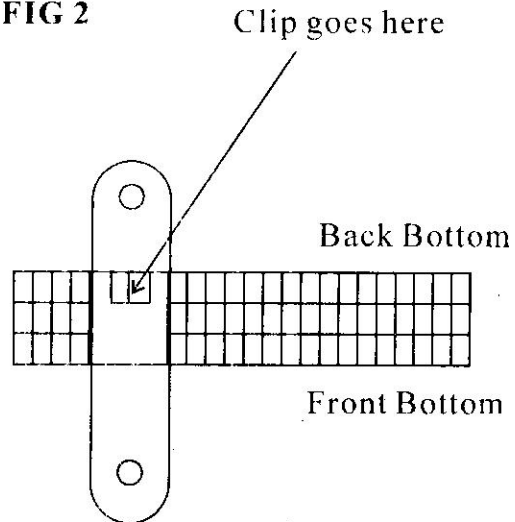

Not to scale

£