# 



## 5739 44 (White) 5739 45 (Magnesium)

2

# Keypad

#### Description

This device enables/disables the system when a previously saved code is entered in the burglar alarm control unit with display. By pressing two pushbuttons of the keypad ('o-' and 'P') and entering the secret code, the system can be disabled, while at the same time sending a silent alarm (robbery function).

Green LED	Red LED	Buzzer
Flashing	-	Active
_	-	Active
OFF	OFF	-
ON	OFF	-
Flashing (5s)	ON	_
OFF	ON	-
ON/OFF	ON	-
	Flashing - OFF ON Flashing (5s) OFF	Flashing -   - -   OFF OFF   ON OFF   Flashing (5s) ON   OFF ON

#### **Technical data**

Power supply from SCS BUS:	18 – 27 Vdc
Max. absorption:	5.5 mA
Operating temperature:	0 - 40 °C

#### 



#### Dimensional data

Size: 2 flush-mounting modules Depth: 20.7 mm

#### Legend

1. Red LED: alarm state

3. Configurator housing

- 2. Green LED: system status OFF: Enabled, ON: Disabled
- 4. BUS
  - **5.** Housing for anti-tamper device

Configuration

#### Z

This configurator assigns the appropriate zone number (from 1 to 8) within the "group" of devices (any free zone of the system). To configure it as belonging to the connector group, no configurator needs to be connected.

Configurator 9 assigns the device to the auxiliary device "group" (auxiliary channel interface or relay actuator).

#### N

This configurator assigns the progressive number to the connector group. Configurator 1 identifies the first device, configurator 2 identifies the second and so on, up to a maximum number of 9 connectors (dividers, or connectors).

### Do not configure. For future applications.

MOD

#### Disabling the BUZZER when keys are pressed

The "key pressure signal" buzzer can be enabled/disabled by pressing 1 for 5 seconds. The connector will beep and flash twice to confirm the operation. To turn the buzzer on repeat the same procedure.

1