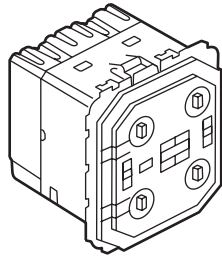# Eco-dimmer

Catalogue number(s): 0 670 83 - 0 488 70/71
0 784 07 - 0 792 07 - 6 651 14 - 5 722 39 - 5 727 39 - 5 743 19/39
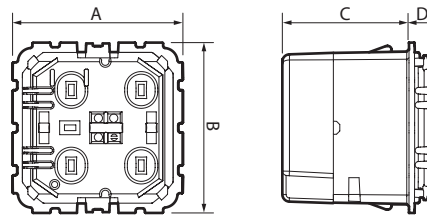**7 520 62 - 7 521 62 - 7 522 62 - 7 523 62**

CONTENTS

1. USE

Comfort with dimming:
2-wire eco-dimmer for any type of energy efficient lamp:
• Dimmable LED
• Dimmable compact fluorescent
• Fluorescent
• Halogen

2. RANGE

	Description	Colour	Cat. Nos.
	Céliane eco-dimmer	-	0 670 83
	Niloé eco-dimmer	White	6 651 14
	Niloé eco-dimmer ready-to-install kit	White	0 488 71
	Mosaic eco-dimmer	White	0 784 07
	Mosaic eco-dimmer ready-to-install kit	White	0 488 70
	Mosaic eco-dimmer	Aluminium	0 792 07
	Arteor square eco-dimmer	White	5 722 39
	Arteor square eco-dimme	Aluminium	5 727 39
	Arteor round eco-dimmer	White	5 743 19
	Arteor round eco-dimmer	Aluminium	5 743 39
	Valena INMATIC eco-dimmer	-	7 520 62
	Valena eco-dimmer	White	7 521 62
	Valena eco-dimmer	Ivory	7 522 62
	Valena eco-dimmer	Aluminium	7 523 62

3. DIMENSIONS (mm)

Cat. Nos.	A	B	C	D
0 670 83	45	45	33.5	7.2
0 784 07 - 0 792 07	45	45	33.5	9.6
5 722 39 - 5 727 39 5 743 19 - 5 743 39	45	45	33.5	9.6
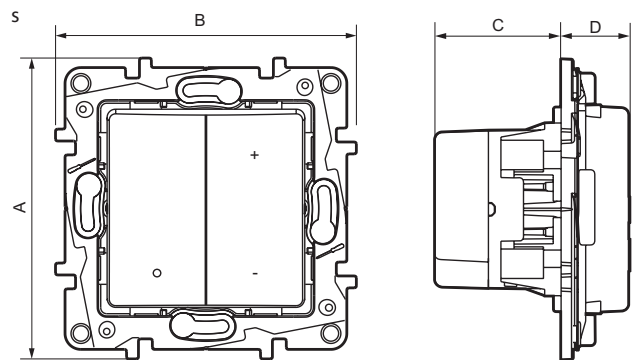
Cat. Nos.	A	B	C	D
6 651 14	80	80	30	20
7 520 62	74.7	74.7	32.1	8.6
7 521 62 7 522 62 7 523 62	74.7	74.7	32.1	11.5

Technical data sheet: F01602EN/03   Updated: 21/01/2015   Created on: 16/01/2013

Eco-dimmer

Catalogue number(s): 0 670 83 - 0 488 70/71
0 784 07 - 0 792 07 - 6 651 14 - 5 722 39 - 5 727 39 - 5 743 19/39
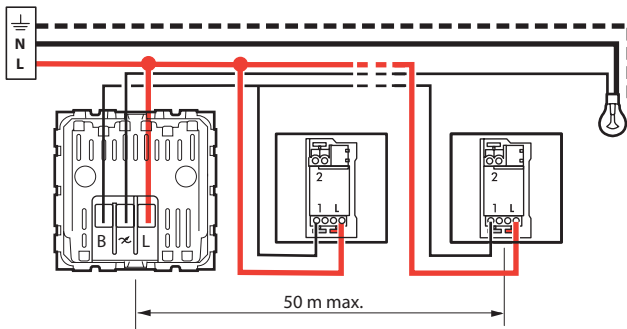**7 520 62 - 7 521 62 - 7 522 62 - 7 523 62**

4. CONNECTION

Screw terminals
Terminal capacity: 2 x 2.5 mm²
Stripping length: 8 mm

5. WIRING
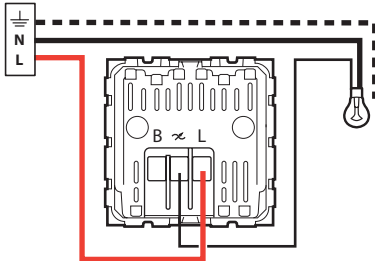
Wiring with Céliane pushbutton

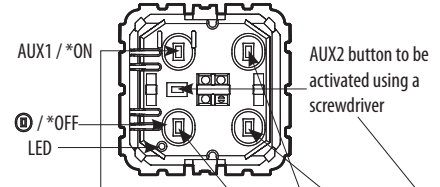

50 m max.

Wiring two-way switch

50 m max.
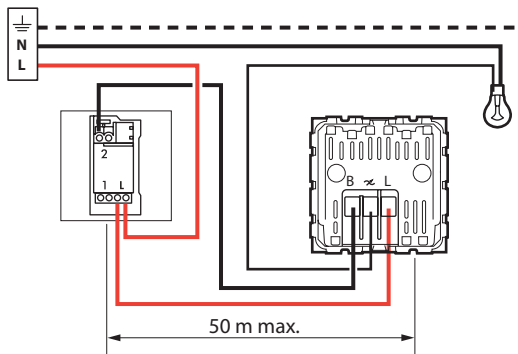
Wiring with Niloé pushbutton

50 m max.
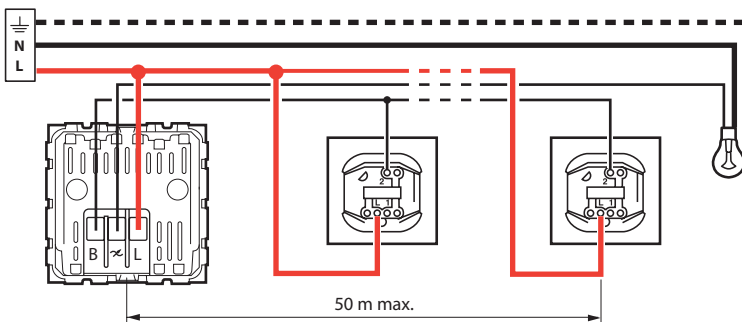
6. OPERATION

In order to start up the different usage types, unclip the rocker plates and press the buttons shown in the panel for 2 seconds. Video animations available at www.legrandoc.com

AUX1 / *ON

AUX2 button to be activated using a screwdriver

⓪ / *OFF

LED

Usage types	ON	⓪	+	-	AUX
Restore to factory configuration (load recognition, capacitive mode, pushbutton assembly, level memory)	X	X	X	X	
Level memory activation	X	X	X		
Level memory deactivation	X	X		X	
Forced capacitive mode (no load recognition)	X	X		X	X
Forced inductive mode (no load recognition)	X	X	X		X
Children's bedrooms (pre-set levels + night light)	X	X			X
Pre-set levels mode			X	X	X
Dimmer mode		X	X		X
Two-way switch mode	X	X			
Pushbutton mode			X	X	

*ON/OFF : button ON/OFF for Mosaic

The LED shows the dimmer status after the AUX button has been pressed.

LED colour code:

Auto-capacitive	Continuous red → factory configuration
Forced capacitive	Flashing red
Auto-inductive	Continuous green
Forced inductive	Flashing green

Technical data sheet: F01602EN/03   Updated: 21/01/2015   Created on: 16/01/2013   **L1 legrand**

Eco-dimmer

Catalogue number(s): 0 670 83 - 0 488 70/71
0 784 07 - 0 792 07 - 6 651 14 - 5 722 39 - 5 727 39 - 5 743 19/39
7 520 62 - 7 521 62 - 7 522 62 - 7 523 62

6. OPERATION *(continued)*

■ Troubleshooting

PROBLEM	CAUSES	SOLUTIONS
The lamp does not switch on	. The circuit is not powered up . The dimmer is not wired correctly . The lamp is broken . The dimmer is broken . The dimmer is in two-way switch mode and is wired with a pushbutton (the status LED is flashing blue)	. Power up . Check the wiring . Replace the lamp . Replace the dimmer . Switch off the mains power to the dimmer circuit (reset the dimmer) and force the dimmer to pushbutton mode (see manual)
The lamp is flickering and cannot be dimmed	. The lamp is not dimmable . The ballast is not dimmable . The lamp and ballast are not compatible . The dimmer is broken	. Replace the lamp with a dimmable lamp . Replace the ballast with a dimmable ballast . Replace the lamp or the ballast to make them compatible . Replace the dimmer
Dimming is not working correctly: (stop/restart; dimming intermittently, etc.)	. The dimmer is in a mode that is not compatible with the load	. Press the AUX2 button to switch on the status LED - If the LED is green, set the dimmer to capacitive mode (see manual) - If the LED is red, set the dimmer to inductive mode (see manual) AUX2 LED
The lamp is flickering at max. lighting	Technical characteristics of the lamp	Adjust the upper threshold (see manual)
The lamp is flickering at min. lighting	Technical characteristics of the lamp	Adjust the lower threshold (see manual)
The lamp switches on but it cannot be dimmed or switched off	. The dimmer is in pushbutton mode and is wired with a two-way switch (status LED ?)	Force the dimmer to two-way switch mode (see manual)
The lamp switches on unexpectedly by itself	. The dimmer is faulty	. Replace the dimmer
The lamp is making a noise	. The dimmer is in a mode that is not compatible with the load . The lamp is not dimmable, or can only be dimmed a little	. Press the AUX2 button, etc. (see above) . Replace the lamp
The dimmer is making a noise	. The dimmer is in a mode that is not compatible with the load	. Press the AUX2 button, etc. (see above)
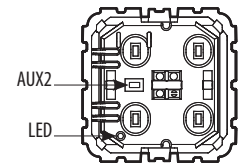
7. TECHNICAL FEATURES

■ 7.1 Admissible loads

		R	R	L	L	C/L	C/L	Dimmable (²)	Dimmable LED (²)
				(¹) +	(¹)	+ LED +			
240 V	Max.	400 W	400 W	400 VA	200 VA	400 VA	200 VA	75 VA or 10 lamps max.	75 VA or 10 lamps max.
	Min.	3 W	3 W	3 VA	3 VA	3 VA	3 VA	3 VA	3 VA
100 V	Max.	200 W	200 W	200 VA	100 VA	200 VA	100 VA	37 VA or 10 lamps max.	37 VA or 10 lamps max.
	Min.	3 W	3 W	3 VA	3 VA	3 VA	3 VA	3 VA	3 VA

Do not mix different load types on the same product.
(¹) Only use transformers designed to operate with electronic switches.
(²) Operates with most dimmable lamps available on the market. In view of the wide variety of such lamps and the absence of relevant standards, a prior test should be carried out to make sure lamps are compatible with the eco-dimmer.

Eco-dimmer

Catalogue number(s): 0 670 83 - 0 488 70/71
0 784 07 - 0 792 07 - 6 651 14 - 5 722 39 - 5 727 39 - 5 743 19/39
7 520 62 - 7 521 62 - 7 522 62 - 7 523 62

7. TECHNICAL FEATURES *(continued)*

■ **7.2 Protection class**
IP 40: assembled product
IP 20: without rocker plate
IK 02

■ **7.3 Material characteristics**
Case: Polycarbonate
Rocker plate: ABS or PC
Halogen-free
UV resistance
Self-extinguishing:
+ 850°C / 30 s for insulating components holding in place live parts.
+ 650°C / 30 s for the other insulating components.

■ **7.4 Electrical characteristics**
Voltage: 100 to 240 Vac
Frequency: 50-60 Hz
Consumption on standby: 0.1 W

■ **7.5 Climatic characteristics**
Storage temperature: -10°C to +70°C
Usage temperature: 0°C to +35°C

8. MAINTENANCE

Clean the surface with a cloth.
Do not use: acetone, tar-removing cleaning agents or trichloroethylene.

Caution: Always test before using other special cleaning products.

9. STANDARDS AND APPROVALS

Compliant with installation and manufacturing standards.
See e-catalogue.